



# Operating the Dishwasher


**OPEN DOOR AND REMOVE THE RIGHT FRONT COVER ON THE BOTTOM (PIC 1)**

**PUSH THE PLUG DOWN UNTIL IT IS SEATED (SEE PIC 2)**

**REPLACE COVER (PIC 3)**



Pic 2  
SEATED PLUG

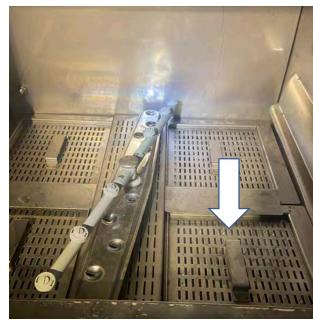

Pic 3



Pic 1

**CLOSE DOOR UNTIL IT LATCHES**

**PUSH POWER BUTTON (PIC 4, LIGHT TO THE RIGHT WILL TURN GREEN)**




Pic 4

**WAIT FOR DISHWASHER TO FILL AND THE TEMPERATURE LIGHT TO TURN GREEN (PIC 5, TAKES APPROX. 30 MINTUES)**

**SELECT WASH CYCLE:  
BUTTON IN FOR 120 SEC. CYCLE  
BUTTON OUT FOR 180 SEC. CYCLE  
(PIC 6)**

**PUSH START (PIC 7)**

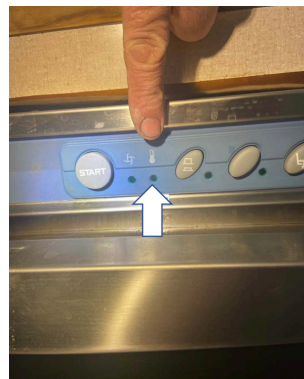

Pic 5



Pic 6



Pic 7

**YOU CAN RUN AS MANY LOADS AS NEEDED. IF DISHES ARE NOT COMING OUT CLEAN (IF THERE IS A LOT OF FOOD LEFT ON DISHES) YOU WILL NEED TO DRAIN AND RE-FILL THE DISHWASHER). SEE DRAINING INSTRUCTIONS ON NEXT PAGE.**

## Operating the Dishasher (page 2)

**OPEN DOOR**

**REMOVE THE RIGHT FRONT COVER ON BOTTOM (PIC 8)**

**LIFT AND REMOVE THE PLUG FROM THE DRAIN (PIC 9)**




Pic 8



Pic 9

**CLOSE THE DOOR AND PUSH AND HOLD THE DRAIN  
BUTTON (NOT THE START BUTTON) FOR 10 TO 15  
SECONDS UNTIL YOU HEAR THE WATER BEGIN TO DRAIN,  
THEN LET GO. (PIC 10)**

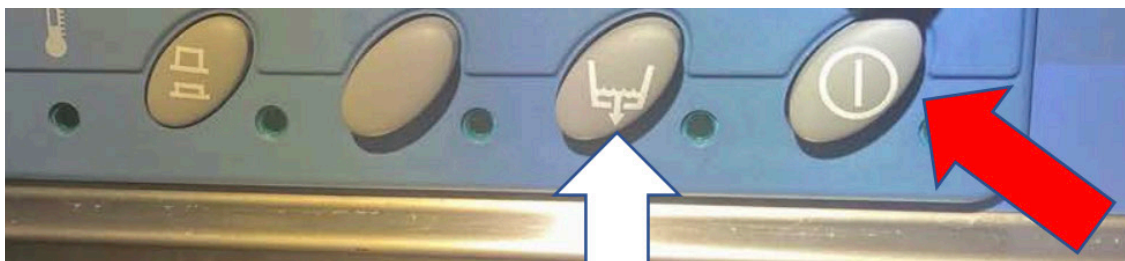

Pic 10



Pic 11

**AFTER DRAINING, LIFT THE BASKETS OUT AND REMOVE THE OTHER COVERS (4 TOTAL),  
AND WIPE THE ENTIRE BOTTOM OUT. RINSE THE STRAINERS AND CLEAN THEM  
THOROUGHLY AND REPLACE THEM. (PIC 11)**

**AFTER THESE STEPS, YOU CAN AGAIN SEAT THE PLUG AND REFILL THE DISHWASHER  
AND WASH MORE LOADS. IF YOU ARE DONE WITH THE MACHINE, LEAVE THE DOOR OPEN  
A BIT BY USING THE STRING ACROSS THE FRONT OF THE DOOR. CLOSING TIGHT WILL  
CAUSE MOLD IN THE DISHWASHER. TURN OFF MACHINE WITH THE (POWER BUTTON ON  
FAR RIGHT).**